

UNIWEB®

We Create New Space



SYSTEM 88 PANEL



SLIMLINE PANEL



END PANEL



L LEG



F LEG



SYSTEM 88 SPACER



#10 x 3/4\"/>



#10 x 1/4\"/>



1/4-20 x 3/4\"/>



1/4-20 WING NUT



P-DRIVE CLIP



METAL DECK



SWAY BAR




TOP CAP




P-DRIVE CLIP

UNIWEB.

We Create New Space

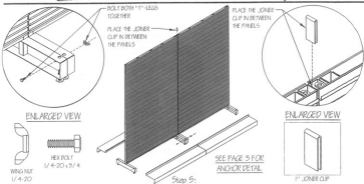


Place joinder clip in between the panels. Bolt the "L"-leg together. Then snap the metal deck into place.

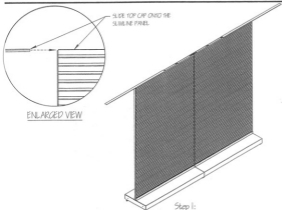

Slide top cap onto slimline panel. Slide from the outside in.


UNIWEB.

We Create New Space



SNAP THE DECKS OVER
THE "T"-RIBS

ENLARGED VIEW

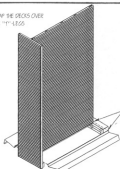


HOOK THE METAL DECK
TO THE FIRST UNIWEB RIB

SEE PAGE 5 FOR
ANCHOR DETAIL

Step 3:

Hook the metal decks to the first Uniweb rib. Then snap the metal decks over the "T"-rib

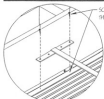


SCREW SWAY BAR TO
THE TOP RETAINER


ENLARGED VIEW



BOLT SWAY BAR TO
SLIPLINE PANEL

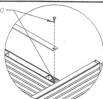

ENLARGED VIEW

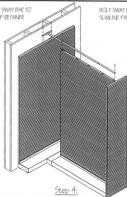

Step 4:

Place sway bar on top of Slipline. Line up bolt holes and bolt the sway bar down.

Then screw the sway bar to the top retainer




UNIWEB®

We Create New Space



SIDED VIEW

SLIDE 1 1/4" LEG INTO THE BOTTOM OF THE PANEL



SECOND POSITION ANCHOR TOWARDS INSIDE OF WORK AREA AND BOLT ANCHOR TO THE GROUND

FIRST HOOK ANCHOR ON/OFF ADJ. LEVELER



SET ALL LEVELERS AT 1/4"




ANCHOR DETAIL

TO BE INSTALLED BY GC, USING POWER WEDGE BOLT EXPRESS FASTENERS - 3/8" X 2 1/8" (REPEAT PROCESS FOR EVERY ADJ. LEVELER)


Step 1:

Slide the 1 1/4" leg into the bottom of the Uniweb panel, While the panel is laying shape up on the floor

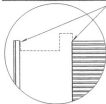

ENLARGED VIEW

HOOK END PANEL INTO THE SLIMLINE PANEL

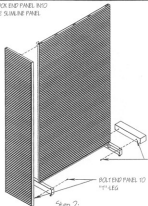

BOLT SPACER 10 1/4" LEG

BOLT END PANEL 10 1/4" LEG

Step 2:


Hook end panel to slimline, Then bolt end panel through the 1 1/4" leg, Bolt spacer through the back 1 1/4" leg




HEX BOLT
1/4-20 X 5/4

UNIWEB®

We Create New Space

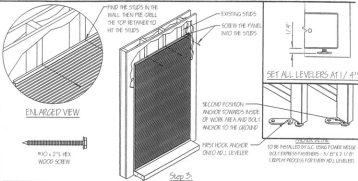

Place the panel against the wall and then screw the panel to the wall through the pre-drilled holes

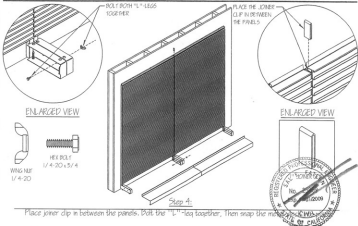


UNIWEB®



We Create New Space



NOTE: CAN BE INSTALLED
PARALLEL AS AN OPTION

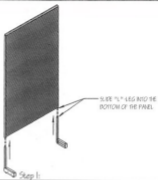

Slide the "L"-leg into the bottom of the Uniweb panel, while the panel is laying shape up on the floor

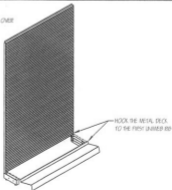

Step 2:

Hook the metal deck to the first Uniweb rib. Then snap the metal deck over the "L"-leg

UNIWEB.


We Create New Space



ANCHOR DETAIL
POWER WEDGE BOLT
EXPRESS FASTENERS
3/8 x 2-1/8

MAKE SURE ANCHOR
BRACKETS ARE ALL
FACE IN THE OPPOSITE
DIRECTION

ANCHOR BRACKET IS
8GA, 3"L x 1"W



ANCHOR PATTERN EXAMPLE

